




TRANSITION**INSTALLATION**

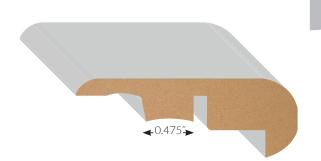




Install the flooring leaving a 1-1/4" space from the end of the step for the stair nose installation.

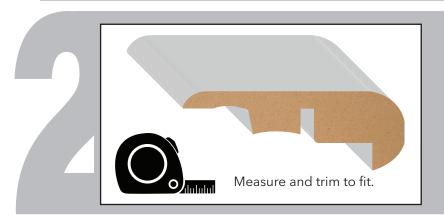


LAMINATE STAIR NOSE

Finishes the end of a step.

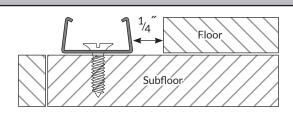

Position the track 1/4" from the floor plank and screw to the subfloor using included screws.

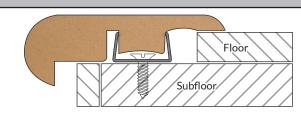

Starting at one end, press the molding into the track inching along the length of the molding. *It will NOT snap in all at once.* You may also use a rubber mallet.